


UZONB AIR INFLATOR

TM-A instructions

PRODUCT LEGEND

Product name	Air Pump
Material	ABS
Product size	170x71x65mm
Product Net Weight	750g
Max Pressure	150PSI
Battery Capacity	10000mAh
Charging Voltage	DC 5V/2A
The output voltage	DC 5V/1A
Operating Temperature	-10~45°C
Charging Time	3-4 Hours

PRODUCT INTRODUCTION

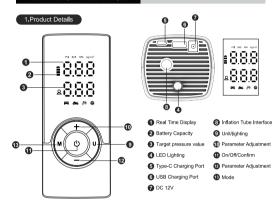

2.Button Introduction



Long press to turn on/off, short press to start/stop inflation. If it does not start within 1 minute, it will automatically shut down.



Unit switching: Provides four types of pressure unit switching Emergency lighting: long press to turn on the LED lighting function. Long press again to turn off the LED light.



This product has a default air pressure value, if there is not To meet your needs, the air pressure can be adjusted manually Value (increases by 0.01 for each short press, long press quick adjustment). After adjusting to the desired value Wait 3 seconds for automatic setup to complete.




Provide different air pressure working modes Pressure unit: PSI/BAR/KPA/Kg/cm2

Default tire pressure in various modes:

Working Mode			<i>₫</i>	%	\mathbb{R}
Default Air Pressure	36PSI	40PSI	50PSI	8PSI	35PSI

▲ Caution Items such as balloons, beach bals, and swim rings cannot be automatically infated because they have an air pressurerequirement below the air compressor's minimum pressure range. Only inflate these items manually with caution.

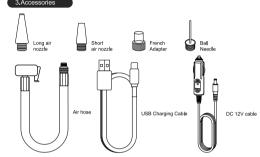

PRODUCT USAGE METHOD

1.Operation Process

- ① Connect the air hose, then press the power 🕚 button to turn on the inflator, and screw the air hose to the tire valve.
- ② Press the "M" button to select the corresponding inflation mode or directly press the " +/- " button to preset the air pressure. After the screen flashes, press the power button to star inflating until the inflating is completed and automatically
- 3 Pull out the air hose and complete the inflation.







2.How to use the DC 12V cable

Here is the situation of using dc12v cable; when connecting the car charging line, the machine will give priority to the power supply of the DC12v cable or when the inflator battery is out of power, it can be powered by DC12v cable.

- (1) Start the engine and check that DC12V is being output from the car socket Always use this product with the engine running. Using DC1
- it without the engine running may cause the vehicle battery to run out.
- (2) Insert the car plug into the car socket and Make sure the power lamp (red) is on.
- 3 Insert the DC12V input terminal at the end of the cable into the input terminal on the product body.



The inflator has an emergency lighting function and can be used as lighting in dark environments. Press and hold the " ${f U}$ " key to turn on the lighting, and long press the " ${f U}$

 
" key to turn off the lighting. Out Put





3.Reverse Charging

Turn on the device first, then plug the charging cable into the power outlet, and then start charging the device.



COMMON PROBLEM:

Phenomenon	Cause/Solution	
Machine not working	①. Check if the battery is in a low battery state ②. If the above situation occurs, please charge the battery before use.	
Inaccurate pressure display	①. The inflator has a tolerance value of approximately ±5%. ②. Please turn on the machine first and then connect the air hose to the valve. ③. Check whether the connection between the air pipe and the valve is tight and there is no air leakage. ④. Remove the air hose from the valve and reconnect it. Check if correct data is recovered.	
After starting the preset pressure, the machine stops after making a sound, and the pressure display is normal.	Please confirm that the preset air pressure is too close to the air pressure of the inflatable product. The inflator will automatically stop after reaching the preset value. Please check whether the connection between the air pipe and the valve is inflact. Please ensure that the air hose and inflator air outlet are not blocked by foreign objects. Please ensure that the cooling holes of the inflator are not blocked by by obstacles.	
Inflation unit conversion	100kpa=14.5psi=1kg=1.01bar Common sedan tire pressure: 2.3-2.5 bar	

PRODUCT DESCRIPTION

1. All types of vehicles (excluding trucks and construction vehiclesover 5 tons) motorcycles, electric vehicles, various bicycles, variousballs, balloons, lifequards. swimming rings, inflatable cushions kayaks, and other inflatable products

- 2. This product has an automatic inflation function for parts thatneed to be inflated When the pressure reaches the standard valueit can automatically stop, intelligently set and easy to operate.
- 3. This product is a precision digital pressure measurement tool that can be used for any measurement. Parts that measure air pressure can also use this product.
- 4. This product has LED lighting function, allowing you to operate in dark environments without being affected.
- 5. This product has an intelligent USB reverse charging interface and supports sports charging for mobile phone products.

PRODUCT FEATURES

Mini size is compact, lightweight, and easy to carry and store. It is a self driving trip. outdoor activity, and daily necessities. The functions include tire pressure detection, air pump, night lighting, built-in power bank, suitable for one device.

Air Efficiency: The car is inflated from 0-2.5bar for about 6 minutes.

Protection Function: It will stop automatically after 10 minutes of pumping up. (Protect the battery and motherboard).

This product has four inflatable modes: "car" "motorcycle" "bicycle" and "ball". You can choose the appropriate mode accordingto your needs. Each mode has a different air pressure default value. No need for you Set it by yourself. Of course, if these default valuescannot meet your needs, you can set the air pressure by yourself andinflate. When the air pressure reaches your set value, the air pumpwill automatically stop.

INFLATION PRESSURE GAUGE:

Product Category	Product Category Product Type		
Bicycle	12,14,16 inch bicycle tires 20, 22, and 24 inch bicycle tires 26, 27.5, 29 inch bicycle tires 700 road bicycle buckle tires 700C road bicycle inner tube tire	30-50 PSI 40-50 PSI 45-65 PSI 100-130 PSI 120-145 PSI	
Motorcycle	Motorcycle Electric motorcycle tires	26-44PSI	
Car Small car tires		32-41PSI	
Ball	Basketball Football Volleyball US-Football	7-9PSI 8-16PSI 4-5PSI 12-14PSI	

PRODUCT PRECAUTIONS:

1 Operational matters

- 1) This product is not allowed to be used alone by children under 5 years old, and Children must be accompanied by an adult.
- Do not use this product as a toy product.
- 3 Do not use this product near flammable and explosive liquids and gases (Such as a gas station)!
- (4) There will be a normal operating temperature during the inflation process Do not continue to inflate for more than 10 minutes at a time. Pay attention when disassembling the hose, Avoid burns.

- ① After continuous use for 10-15 minutes, it will automatically stop to prevent the machine from overheating.
- 2 Suggest reopening every 2-5 minutes after stopping.
- 3 If the product is not used for a long time, it may damage the battery.
- Suggest charging at least every three months!

